
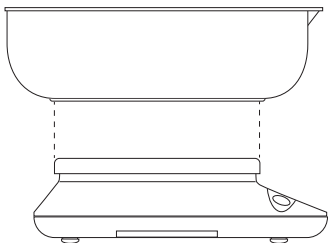


# AMERICAN WEIGH

AMW-810 Bowl Scale  
2000g x 1g

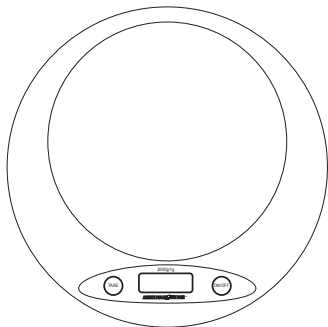

USER'S MANUAL

**American Weigh**  
**AMW-810 User's Manual**  
**2000 x 1g**

Thank you for purchasing the AMW-810 Bowl Scale. With normal care and proper treatment, it will provide you with years of reliable service. Please read all operating instructions carefully before using the scale. It may be necessary to calibrate the scale before its first use .

- Avoid any exposure to extreme heat or cold. Your scale will work better when operating in normal room temperature. Always allow the scale to acclimate to normal room temperature for at least an hour before use.
- Give the scale sufficient warm up time before use. Usually 30 to 60 seconds to give the internal components time to stabilize.
- Keep your scale in a clean environment. Dust, dirt, moisture, vibration, air currents, or a close proximity to other electronic equipment can cause an adverse effect on the reliability and accuracy of your scale.
- Handle with care. Gently apply all items to be weighed onto the weighing surface. Although this scale is designed to be quite durable, avoid rough treatment as this may permanently damage the internal sensor.
- Do not shake, drop, or otherwise shock the scale. This is a precision instrument and must be handled with extreme care.
- Only operate the scale on a stable, vibration free surface.
- Always store in a dry place to avoid moisture accumulation on internal components.

## **I. Operation**

Place the scale on a flat surface. If you do not wish to use the bowl, remove it before proceeding

1. Select between grams or ounces using the switch on the bottom of the scale.
2. Press ON/OFF key.
3. Wait until [0.0] is displayed.
4. You may now add the item(s) to be weighed.

## **II. Tare Weighing.**

You may use your own container by doing the following.

1. Turn on scale as described above.
2. Place the container ( tare item ) on the platform.
3. Press TARE and wait until [0.0] is displayed.
4. Add the “net-weight-item”.

## **III. Troubleshooting**

The primary reason for innaccuracy or malfunction are low batteries, overload or operating on an unstable surface. Please keep this in mind and maintain and operate your scale properly. This scale is a precision instrument and must be handled with care.

### **Error Code Descriptions:**

**Error:** Nothing on screen, [LO]

**Solution:** Replace Batteries

**Error:** [EE]

**Solution:** Load is in excess of 2000g, remove the extra load.

#### **IV Specifications:**

Capacity:	2000 g / 70.55 oz
Readability:	1 g / 0.05 oz
Units:	g (grams) / oz (ounces)
Tare Range:	Tare to full capacity
Auto Off:	~60 seconds
Backlight:	Blue backlight
Power:	4 x AA Batteries
Bowl Dimensions:	7.75" x 7.75" x 2.25"
Base Dimensions:	7.5" x 7.5" x 2"
Weighing Surface:	5.25" diameter